

X-VIBER UPDATE USB DRIVERS

1. INTRODUCTION

This document describes in details the complete procedure to update the USB Drivers used to connect the X-VIBER Instrument to PC.



The newest drivers can be found in any XTREND Installation CD-ROM (begin with Service Pack 14) or can be downloaded from www.vmiab.com site. The download file (USB_DRIVER_NEW.ZIP) must be un-zipped in any computer directory.

2. STEP BY STEP INSTRUCTION

Connect the X-VIBER Instrument to computer using the USB cable. In this stage the X-VIBER Instrument can be off.

On the Desktop select **MyComputer** icon and click right.
On the pop-menu which appear select **Properties** item:

The **System Properties** window will appear. Select **Hardware** tab and click on **Device Manager** button.

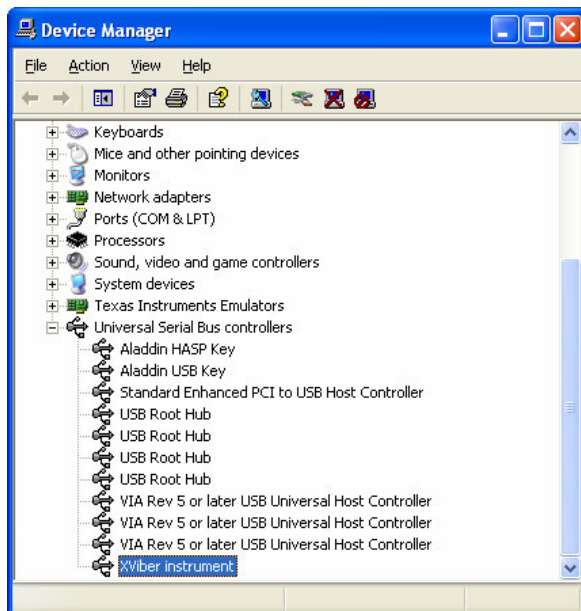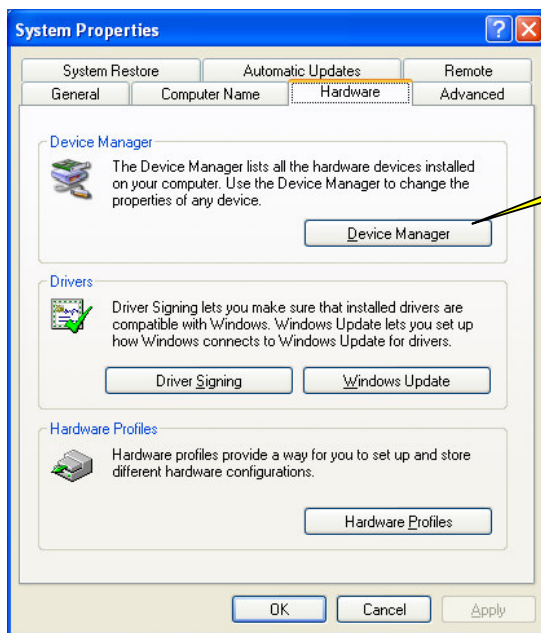



Click here

In the **Device Manager** windows extend **Universal Serial Bus controller** item and after that select item **XVIBER Instrument**.

If the Instrument is not connected to the PC this item will not appear!

Click with right-mouse button on **XVIBER Instrument** item and from the pop-up menu select **Properties**:

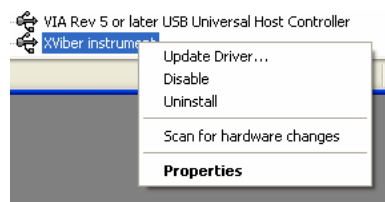

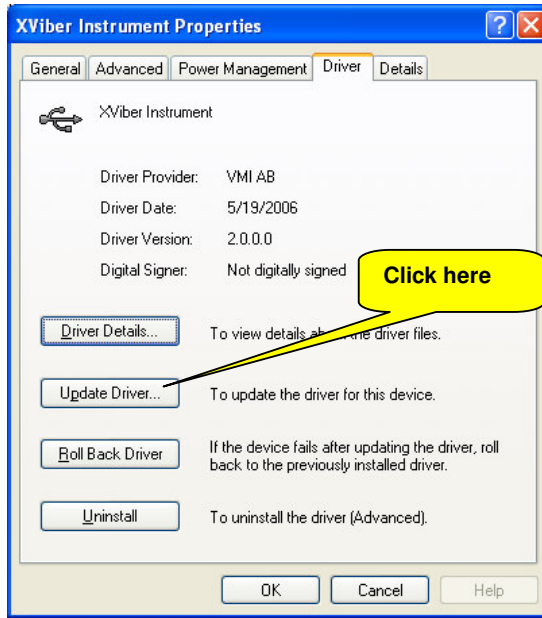


In the **XVIBER Instrument Properties** windows select **Driver** tab and click on **Update Driver** button.


The **Hardware Update Wizard** windows will appear:





Press Next.

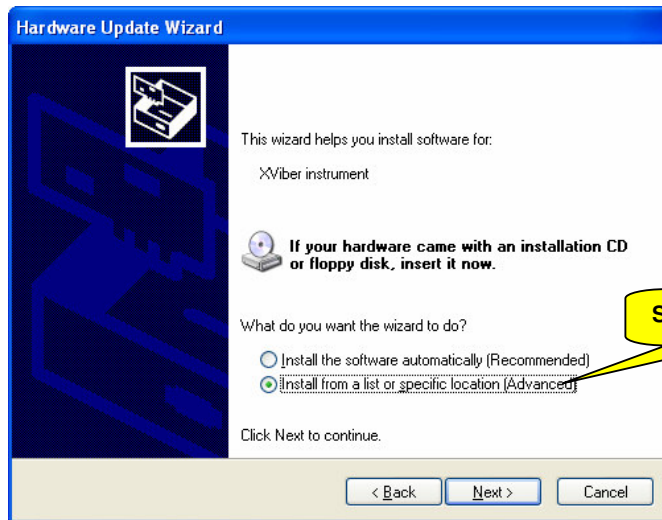

Press Next.

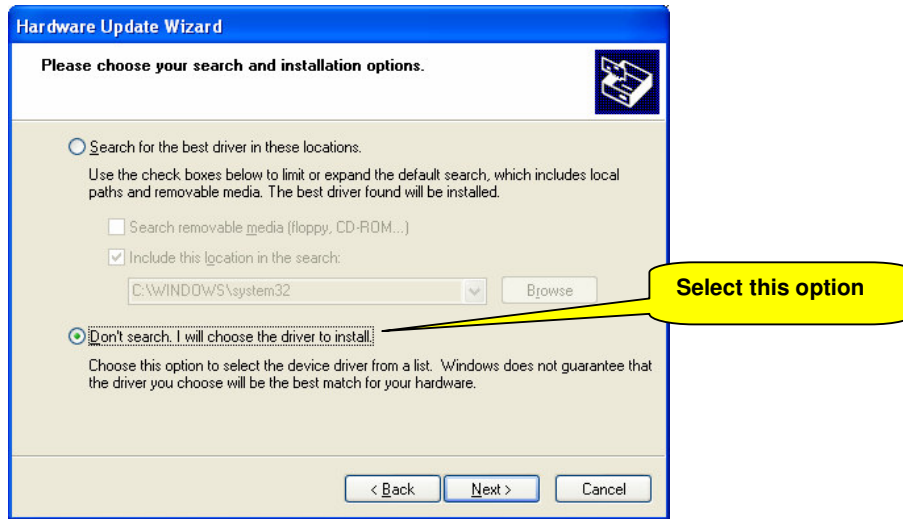

Press Next.

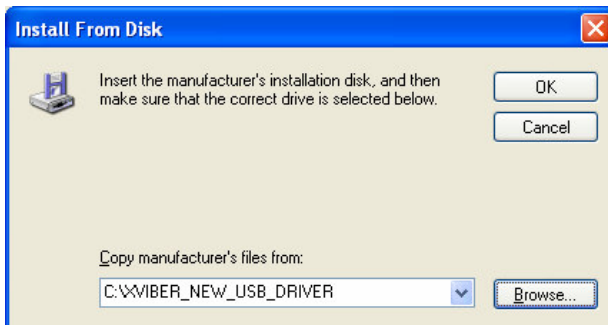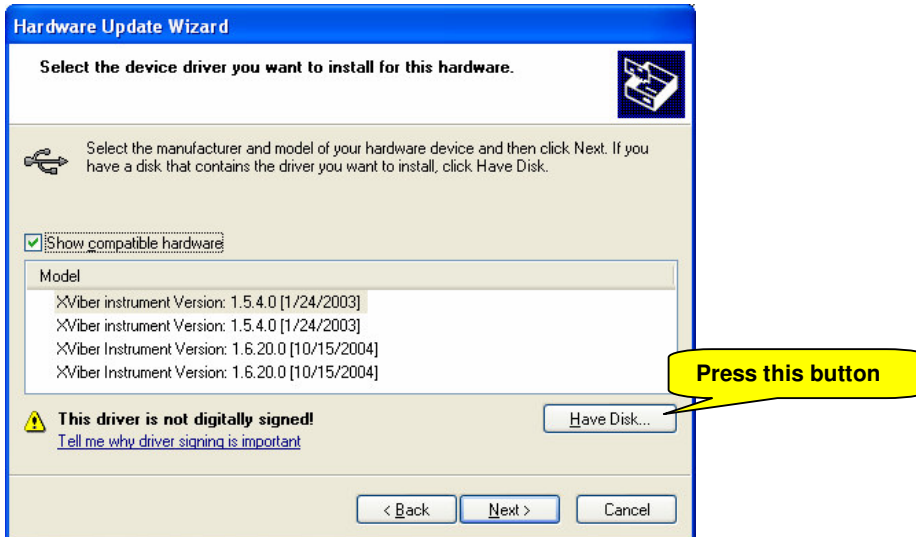


Browse to select the location where you un-zipped the Drivers.



Select the file **FTDIBUS.INF** and click **Open**

1

X-VIBER – UPDATE USB DRIVERS

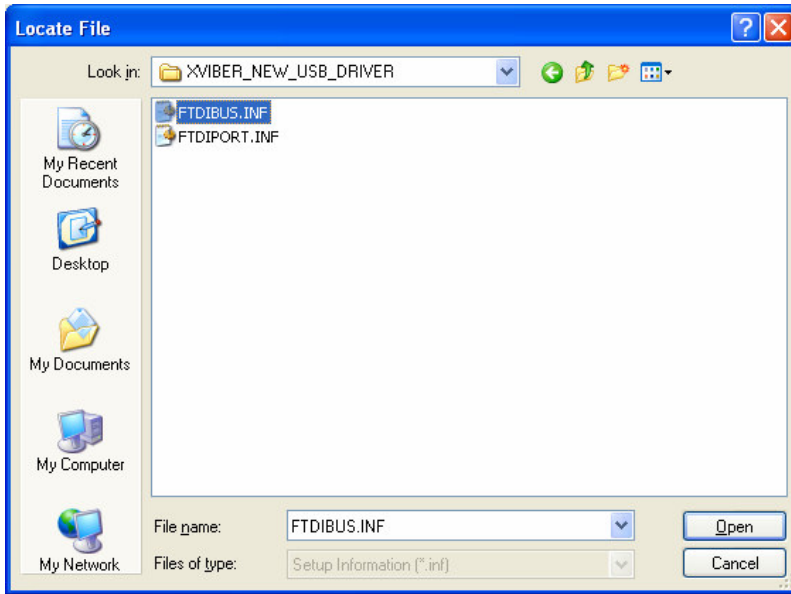

Press **OK** to continue into **Install From Disk** windows.

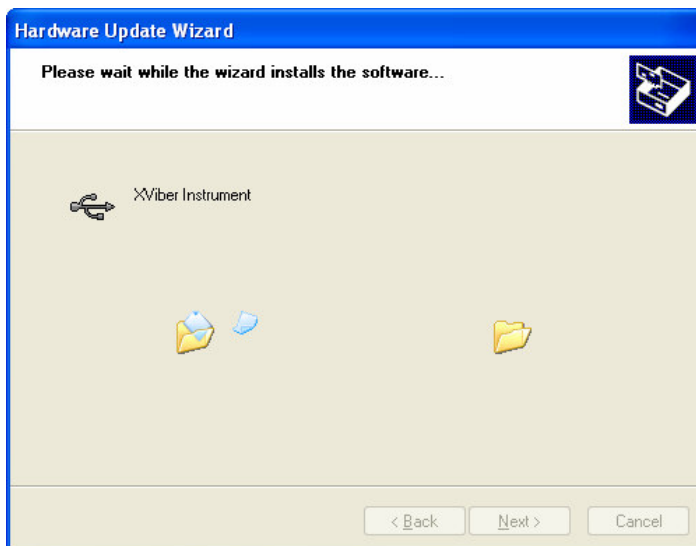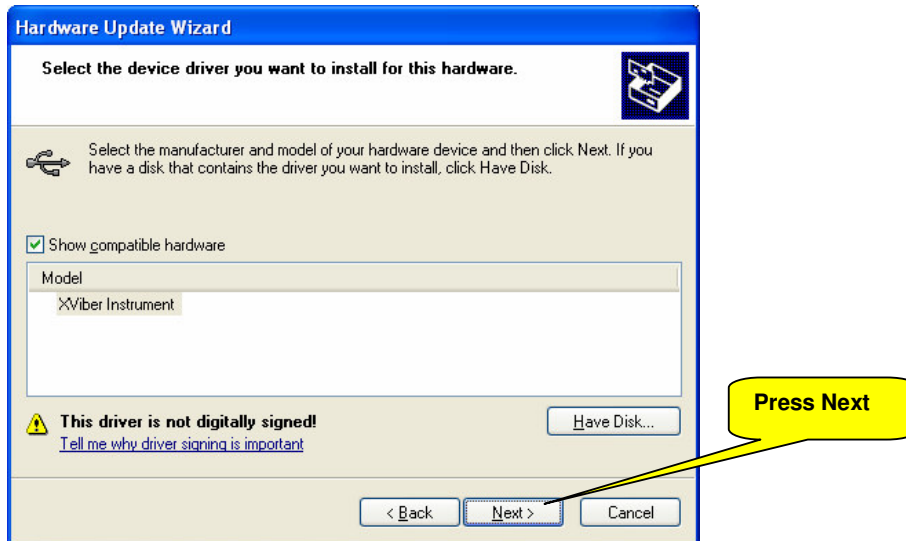


X-VIBER – UPDATE USB DRIVERS

Just ignore the message pressing the **Continue Anyway** button.




Wait until the installation process will finish.

Press **Finish** button.

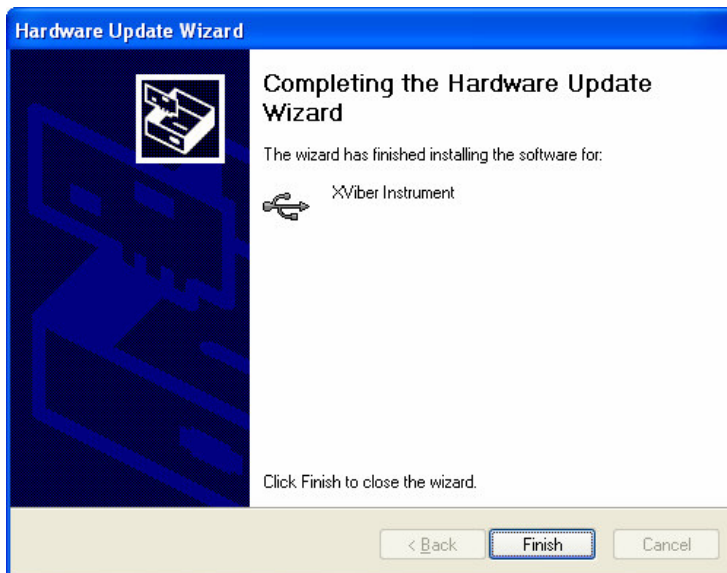


Press **Finish**.


Now the operation system asks for a second set of drivers to be installed. These are USB Serial drivers. You don't need these drivers, but will be use for the future development of the X-VIBER Instrument, so install also these components.

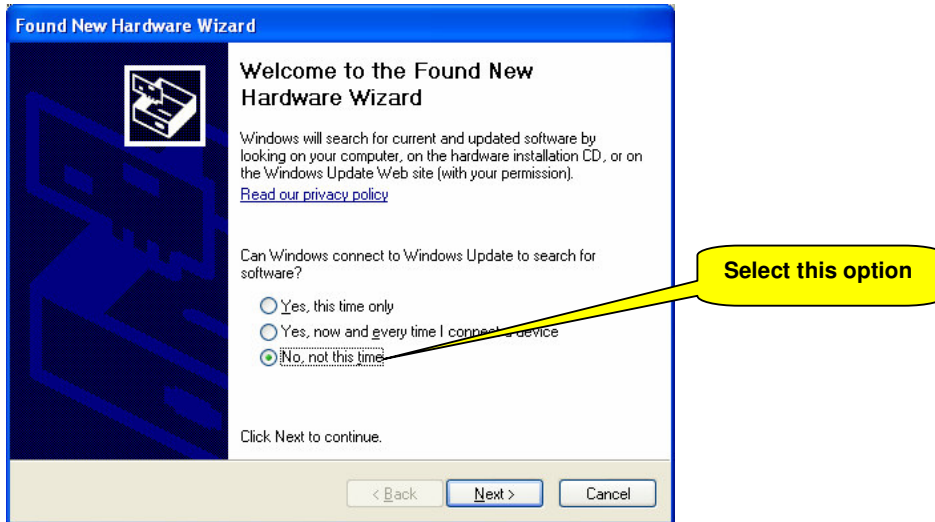

Press **Next** to continue.

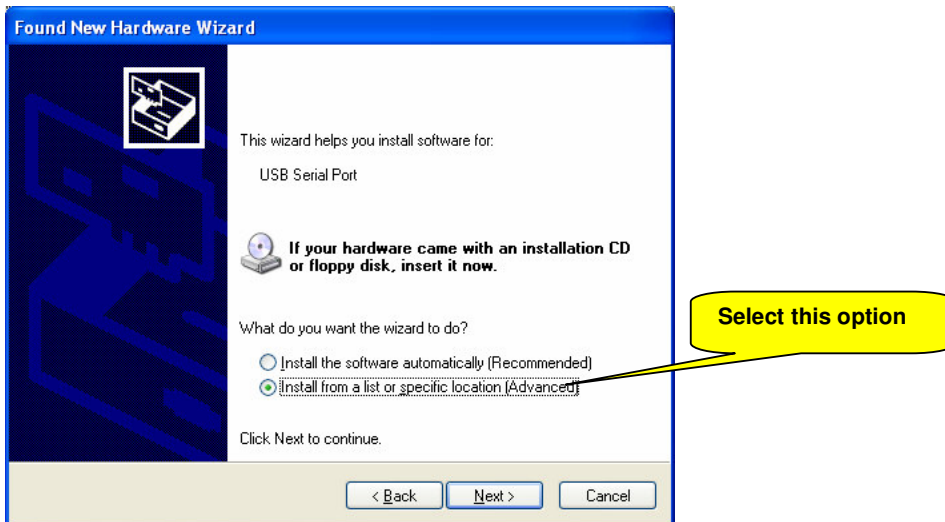

Press **Next** to continue.

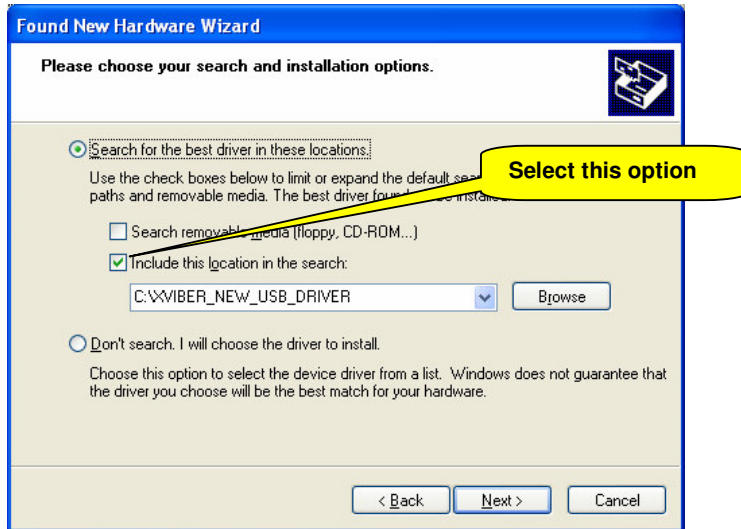

Press **Next** to continue.



Just ignore the message pressing the **Continue Anyway** button



Wait until the installing procedure finished.



Press **Finish**.